


OPERATION PROCEDURES PARTS & SERVICE MANUAL

As built for
AAA COOPER

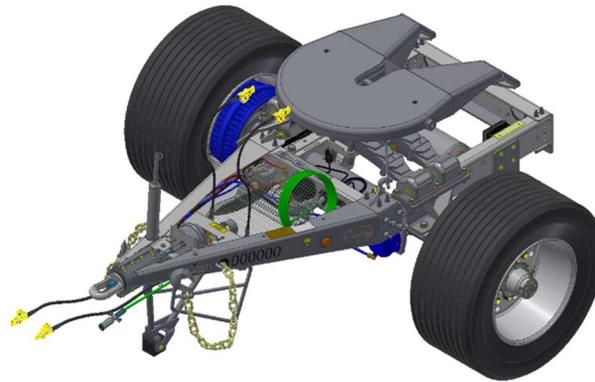

**SILVER EAGLE MODEL VAST20W
PART #33133**



5825 NE Skyport Way - Portland, OR 97218
(503) 281-0727 - (800) 547-6792 - (503) 335-2171 Fax
www.silvereaglemfq.com

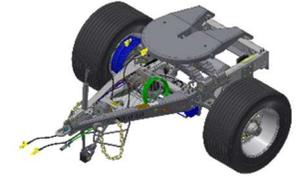


Table of Contents

MAINTENANCE PROCEDURES

Specifications	3
Operating Silver Eagle Fifth Wheel	4
Fifth Wheel Maintenance	5
Silver Eagle Fifth Wheel – Jaw Removal	6 – 7
Trip Block Spring Removal / Installation	8
Drawbar Eye Removal / Installation	9

PARTS LISTING


Master Assembly.....	10
Major Assembly.....	11
Air Assembly.....	12 – 13
Electrical Assembly.....	14



Silver Eagle Manufacturing Company
 5825 NE Skyport Way
 Portland, OR 97218-1249
 TF PH: 800-547-6792 | D PH: 503-281-0727
 FX: 503-335-2171
 www.silvereagle.com

Date: 10/14/14
 Quotation: A11344
 VAST20W Eagle Series
 Single Axle Converter Dolly, 102"

PART: 33133


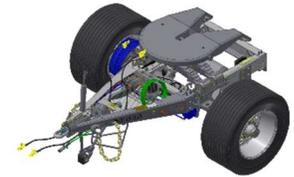


Customer: AAA Cooper Transportation
 Attention: Steven Aronhalt

1-001	50,000 psi yield strength steel channel drawbar, counter-balanced Huck-bolted frame	STD
1-005	Lunette eye rubber-mounted in steel shock housing, air jam eye w/ 3/8" thick wall welded shank.	STD
1-011	Induction hardened steel eye, 2-3/8" I.D. X 1-5/8" thick with 3/8" thick wall welded shank	STD
1-034	Lunette eye height 33"	STD
1-072	Drawbar length, center of eye to centerline of axle 74"	STD
1-220	Two hinged drawbar lifting Power Zone handles	STD
1-348	Unladen 5th wheel height 47"	STD
1-360	Steel stiff leg with replaceable rubber foot pad	STD
1-710	Pogo Stick To Hold Air Lines with two clips	\$45
2-020	36" fabricated steel table 5th wheel w/ cast steel center, mounted directly above axle, with travel limit cables-- ROADSIDE (LH) FRONT PULL HANDLE - Short Handle	STD
3-003	Direct drawbar pull on cambered axle w/ 1/16" toe-in-- 77-1/2" track for 102" wide trailer	STD
3-115	Meritor TP-4671 Axle w/ 16-1/2" X 7" s-cam "Q" Plus Brakes w/ non-asbestos linings - 3 holes Stemco	STD
3-209	Haldex 6" Automatic Slack Adjusters and 30 sq in service chambers	STD
3-XXX	10-stud cast steel hubs & Webb Vortex drums for dual hub pilot mount steel disc wheels	STD
3-416	Stemco "Guardian" oil seals and hubcaps	STD
3-510	SAE 80W-90 wheel bearing lubricant	STD
3-XXX	Stemco Tire Inflation System / Grote PSI Light	INC
4-005	Spring eyes mounted in shock-absorbing rubber boots	STD
4-010	4" wide 7-leaf (plus rebound leaf) 2-stage transverse-mounted leaf springs, 20,000 lb capacity	STD
5-001	Steel grit blast, 8-stage pretreatment, epoxy primer (E-Coat) for u-bolts & 5th wheel, air reservoir and axle beam	STD
5-002	Hot Dipped Galvanizing as separate frame pieces prior to assembly	STD
6-010	Two 1/2" X 32" grade 70 chains w/ 5 ton hooks	STD
7-116	Haldex 2S-1M Anti-Lock Brake System	STD
7-210	Sealco pressure protection valve, emergency valve & Bendix check valve	STD
7-218	Sealco Hostling Valve	INC
7-221	Anti-Back (False) Charge Valve	STD
7-299	Steel air tank, rubber isolated	STD
7-305	Black rubber air lines for connection to lead trailer 36"	STD
7-309	Black rubber air lines for connection to 2nd trailer 86"	STD
7-416	Two pair of service/emergency Phillips w/Filter Std Seal 12-0081 and 12-0061	STD
7-XXX	Drawbar Wire Protection Roadside	STD
8-117	Sealed modular harness and frame-mounted replaceable 7-way socket.	STD
8-210	9' to front trailer and 11' to rear trailer SAE J2222 straight green-jacketed IV cable for connection to 2nd trailer	STD
	Only ABS light	STD
9-141	(2) Customer provided 445/50R22.5 Goodyear G394 DuraSeal steel belted radial tires	INC
9-747	(2) 22.5" X 14" Accuride hub pilot mount steel disc wheels (10 stud), pre-painted white	NC
	OMIT MUDFLAPS	NC
	OMIT MUDFLAP HANGERS	NC



SILVER EAGLE FIFTH WHEEL OPERATING INSTRUCTIONS

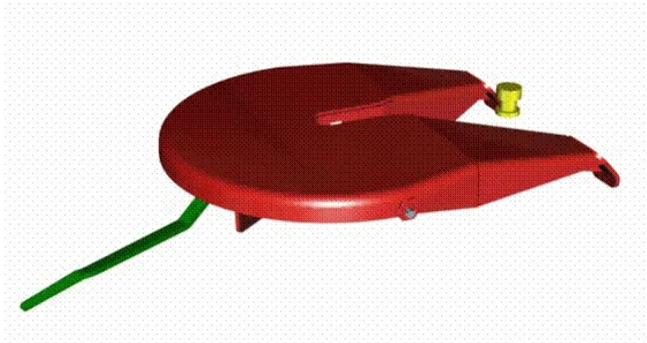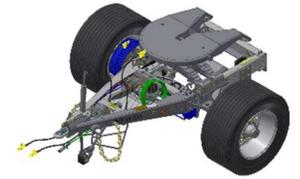

Coupling

1. Make sure jaw is locked open and trailer is at proper height.
2. Back dolly slowly under trailer until jaw locks kingpin and handle moves to the center of the dolly.

Uncoupling

1. With vehicle at rest in a relaxed condition and landing gear down, (not being pushed together or pulled apart), pull fifth wheel handle upward and outward to lock the fifth wheel open.
2. Pull dolly slowly out from under the trailer.

Note


If the handle will not pull outward when the vehicle is in a relaxed condition, use landing gear to raise trailer and unload the dolly fifth wheel.

Contact Silver Eagle Customer Service

for a video tape on coupling and uncoupling twin/double trailers

PERFORMANCE TESTING/ADJUSTMENTS


1. Pull the lever into the uncoupling position. This is where the lever is pulled out and held up by the "Catch Point" indicated in view A-A. If the lever won't stay up, the adjuster nuts on the adjuster at the back end of the lever are probably screwed in too far. Back them off until lever will stay on the catch point.
2. Test the 5th wheel for proper coupling with a test kingpin. Test with the lever in the uncoupling position. If it doesn't release from the "catch point", then the adjuster nuts probably need to be screwed in further.
3. With the jaw closed or in the coupled position, pick the lever up and out of the locked position. Hold the lever just shy of falling back into the locked position. Release the lever to ensure that it passes freely into the locked position.
4. When 5th Wheel functions properly, tighten the lever adjuster locknut securely.

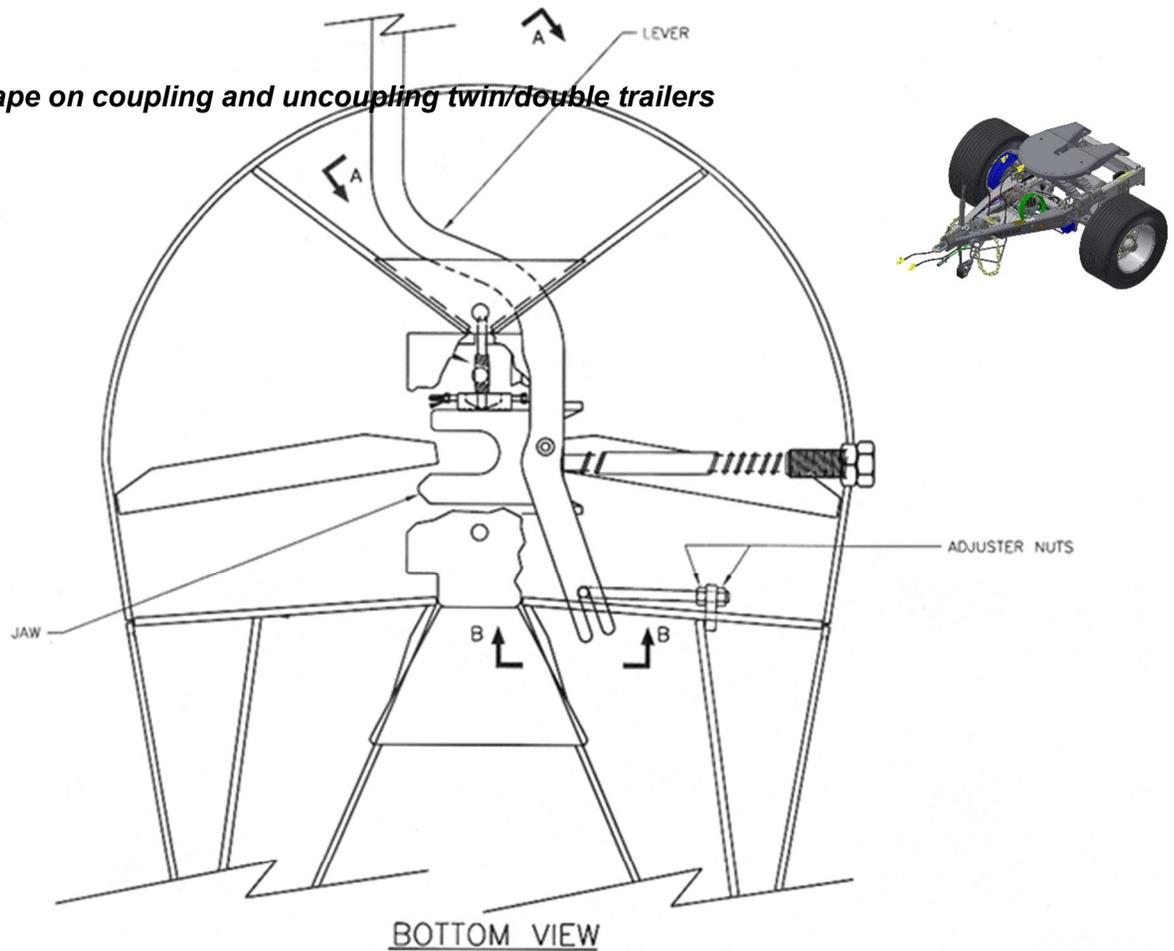


BOTTOM VIEW

ADJUSTMENT OF LEVER & JAW ASSEMBLY

1. Release Jam Nut (refer to View B-B)
2. Tighten bolt until lever is secure against Jaw assembly.
3. Loosen bolt 1/4 turn or until assembly moves freely.
4. While holding bolt secure from turning, tighten jam nut.

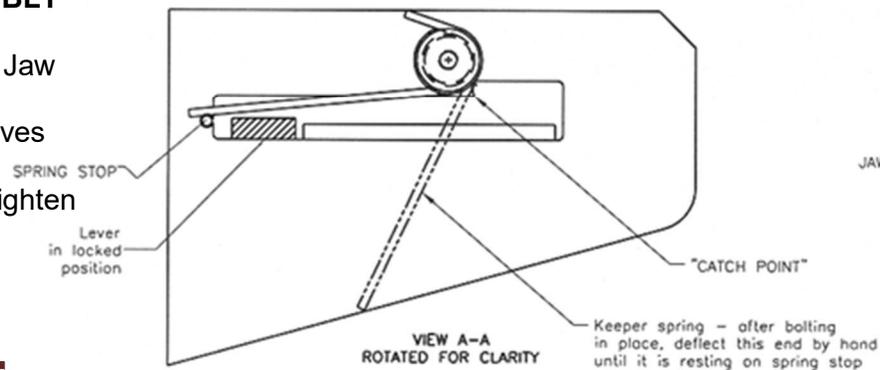

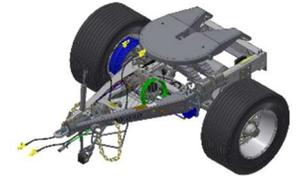


SILVER EAGLE FIFTH WHEEL MAINTENANCE

Jaw Removal (Refer to Diagram D)

1. Make sure the jaw is closed. If not, it can be closed by pushing the trip block (16) forward with a rod or bar. The jaw should be all the way across the center casting (the handle will be in). **Caution: Keep your hands clear of the jaw, it is spring-loaded.**
2. Using a pair of vise grips, clamp the trip lock rod in front of the guide hole on 5th wheel center casting (16) so as to prevent it from moving aft when jaw is removed.
3. When removing the guide bolt (25), applying an anti-seizing compound to the exposed threads often makes the removal process easier.
4. Remove the jaw spring (22) by pulling it through the push rod guide nut.
5. Pull the fifth wheel lever (19) all the way out.
6. Disconnect the fifth wheel lever (19) from the jaw/pushrod assy (18).
7. Remove the jaw/pushrod assy (18) from the 5th wheel table.
8. Lubricate and install the replacement jaw/pushrod assy (18) in the table making sure the pointed tine on the jaw is to aft end of the dolly.
9. Slide jaw/pushrod assy in place without spring. Align hole in jaw with mating hole in lever.
10. Apply loctite 242 medium strength thread adhesive or equivalent to cleaned threads of capscrew (23) and jam nut.
11. Thread capscrew (23) into jaw/pushrod assy (18) with two washers (20) between the capscrew head & the lever. Torque the jaw bolt to approximately 70 ft-lbs. The lever should have minimum clearance to allow free rotation against the jaw without binding through its full travel.
12. Tighten the jam nut (1/6-1/4) turn – after contacting the jaw while ensuring the capscrew does not turn.
13. Slide pushrod spring (22) on push rod of the jaw.
14. While holding lever back far enough so the jaw pushrod protrudes into the guide nut, tighten the guide nut (25) securely.

15. Remove the vise grips from the trip block rod.
16. Test the table to ensure the jaw opens and closes properly.

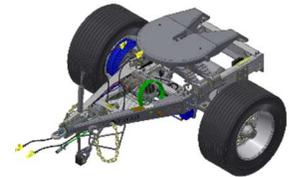

Jaw Spring Removal/ Reassembly (item 22)


- Complete steps 1 through 4 of Jaw Removal.
- Completes steps 13 through 17.


Lever Removal/ Reassembly (item 17)

- Remove lever (17)
- During Reassembly make sure the 2" jam nut is jammed to the 2" standard nut.
- Test the table to ensure the jaw opens and closes properly.

Lever Removal/ Reassembly

- Complete step 1 & 6 of jaw removal
- Install new lever
- Complete steps 10 thru 12 of jaw removal.
- Test the table to ensure the jaw opens and closes properly.

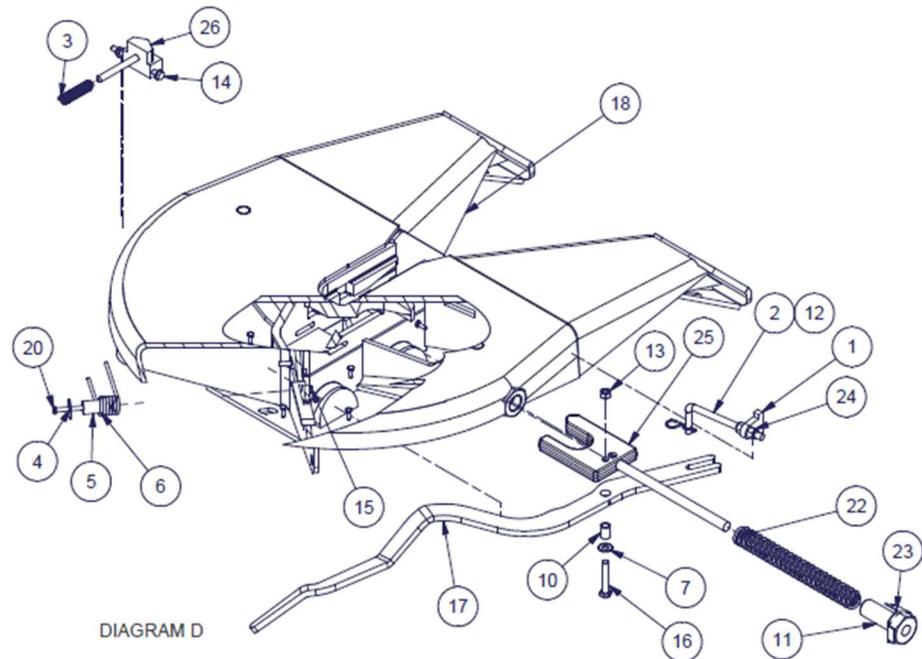

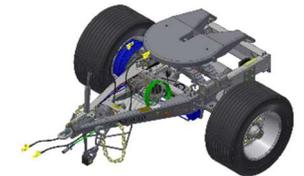


TRIP BLOCK / TRIP BLOCK SPRING REMOVAL / REASSEMBLY

- Complete steps 1 through 5
- Remove the 3/8 bolt, 3/8 lock nut and the two 3/8 washers
- Release the vise grips. **Caution: The trip block is under spring Pressure. Keep hands clear of it when releasing vise grips.**
- Remove the trip block (16) and the trip block spring through the throat of the 5th wheel table. **Caution: The jaw is under spring pressure. Use pliers or another suitable devise to remove old trip block and spring.**
- Install the new trip block and / or trip block spring in the throat of the 5th wheel table. **Caution: The jaw is under spring pressure. Use pliers or another suitable devise to install new trip block and spring.**
- Push the trip block (16) as far forward as possible, with a rod or bar and reinstall vise grips to the trip block rod of item (16) in front of 5th wheel center casting.
- With anti-seize applied to the 3/8 bolt, reinstall the bolt, two washers and lock nut making sure the trip block can freely move fore and aft when pushing on it with a rod or bar (leaving the lock nut 1/6"-3/32" from being fully tightened should work well).

- Release the vise grips. **Caution: The trip block is under spring pressure. Keep hands clear of it when releasing vice grips.**
- Test the table to ensure the jaw opens and closes properly.

DRAWBAR EYE REMOVAL & INSTALLATION INSTRUCTIONS

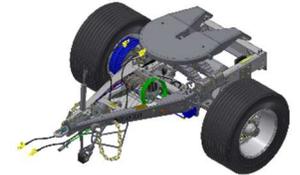

1. Place dolly under a trailer. Set brakes on trailer and dolly.
2. Remove safety wire if present, on 1283 nut.
3. Remove 1283 nut and 1193 washer or 15315 and 15660.
4. Use forklift or eye removal tool (Silver Eagle part no. 15314) to pull against drawbar eye and remove it from the shock housing.
5. Clean any debris from inside of shock absorber bushing and lubricate with rubber lubricant or soapy water.
6. Lubricate the shock absorber bushing with rubber lubricant or soapy water and install into the shock housing.
7. Lubricate the shank of the new drawbar eye with rubber lubricant or soapy water and install into the shock housing.


NOTE: The shank of the drawbar eye will only be able to be pushed into the shock absorber bushings a little way by hand. There are three methods of pushing it in the final amount:

- (1) Place the dolly under a trailer or up against a solid wall. Set the brakes on the trailer and dolly. Use a forklift or hoist to push against the drawbar eye until it is seated on the shock absorber bushing.
 - (2) Use a sledge hammer to hammer on the end of the drawbar eye until it is seated in the shock absorber bushing.
 - (3) Use the eye removal tool as #4 above.
8. After the drawbar eye is in place, clean the threads on the shank. **VERY IMPORTANT:** Coat the threads with Never-SeeZ, pipe compound, or some other similar product. to prevent corrosion and keep the nut from seizing.
 9. Install a new washer and thread the nut onto the shank.
 10. Tighten the nut until the rubber shock absorber bushing bulges toward the outer edge of the shock housing at the corners – this is approximately 400-500 ft/lbs of torque.

NOTE: Shock absorber bushing may split if tightened excessively.


11. Install the safety/ground wire through one side of the nut and shank. This is accomplished by drilling through one side of the nut and shank providing a hole for the bolt and nut securing the safety wire. This completes the ground circuit and prevents the nut from backing off.
12. Periodically check the tightness of the nut and adjust as necessary. You should not be able to turn the lunette eye by hand at any time.

Master Assembly: 33133

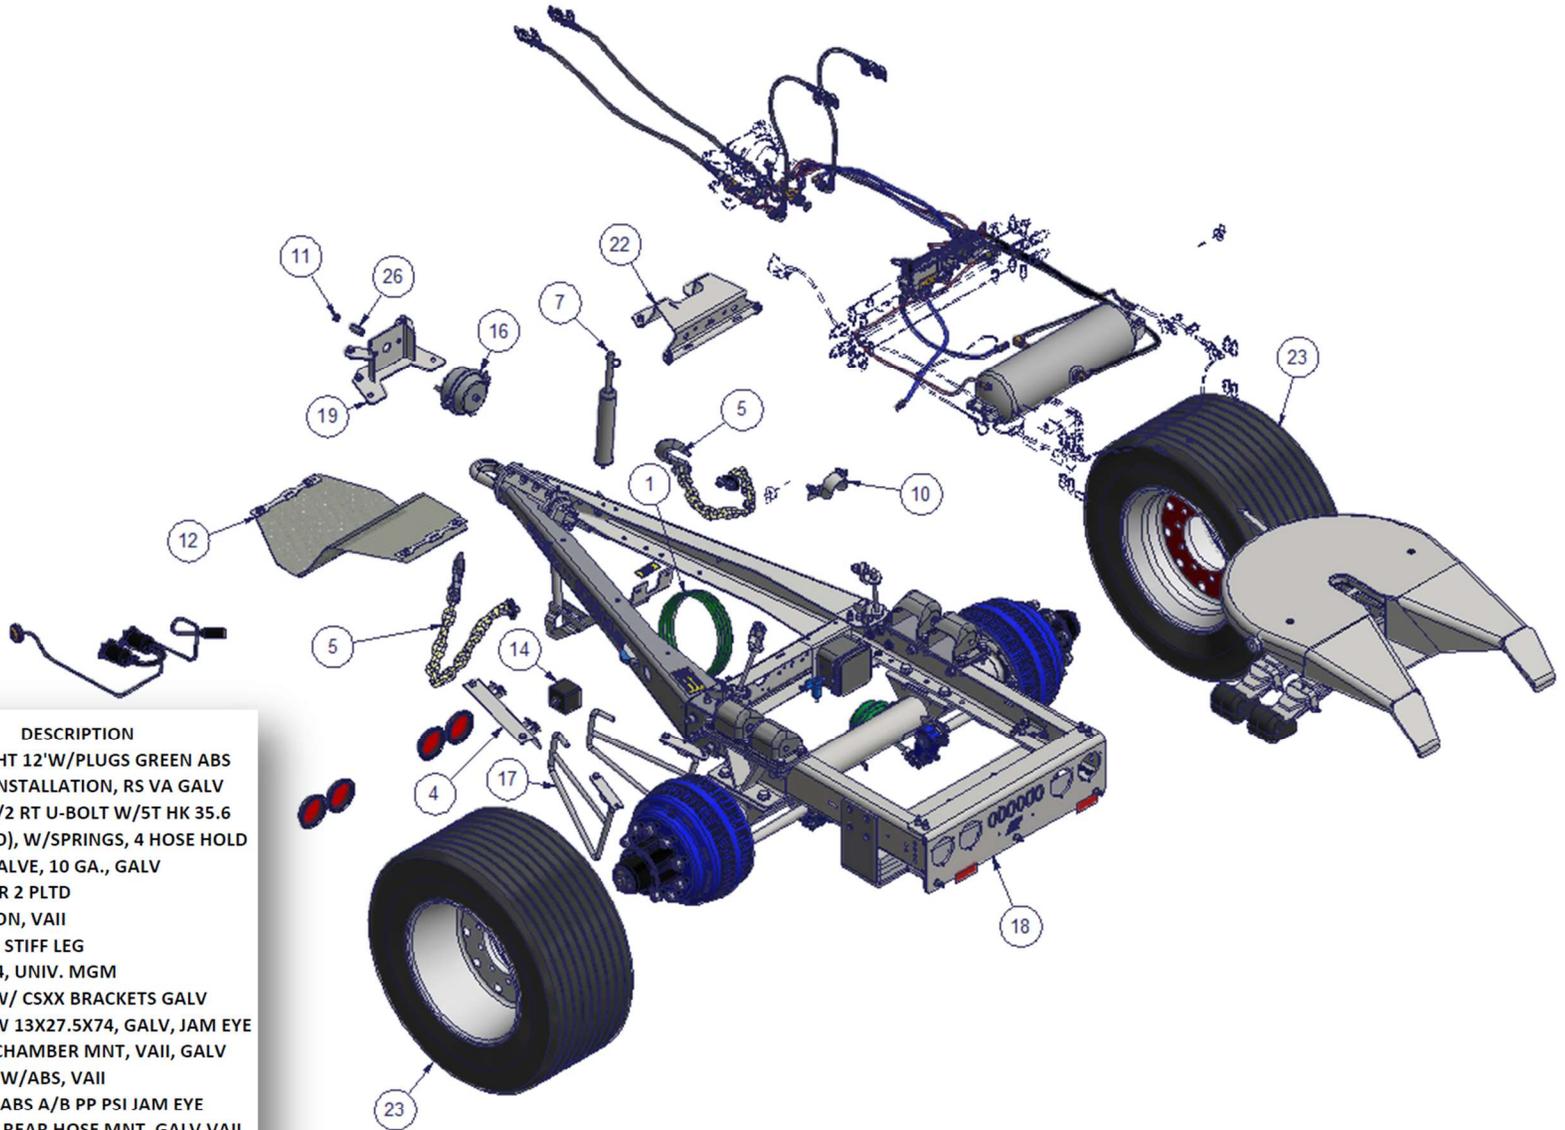


ITEM	QTY	PART	DESCRIPTION
1	1	10318	CABLE 7-WAY STRAIGHT 12'W/PLUGS GREEN ABS
4	1	11521G	GLADHAND HOLDER INSTALLATION, RS VA GALV
5	2	12710	SAFETY CHAIN ASSY 1/2 RT U-BOLT W/5T HK 35.6
7	1	14002	FLEXASTICK 20" (POGO), W/SPRINGS, 4 HOSE HOLD
10	1	17716G	GUARD, PUSH-PULL VALVE, 10 GA., GALV
11	1	1851	NUT 5/8-18 JAM HX GR 2 PLTD
12	1	21030	Z-BASKET INSTALLATION, VAI
14	1	24563	INSTALL, RUBBER PAD STIFF LEG
16	1	2861	AIR CHAMBER TYPE 24, UNIV. MGM
17	1	29997	INSTAL P/Z HANDLE, W/ CSXX BRACKETS GALV
18	1	30147	MAJOR ASSY VAST20W 13X27.5X74, GALV, JAM EYE
19	1	30151G	INSTAL, JAM EYE AIR CHAMBER MNT, VAI, GALV
20	1	30152	ELEC ASSY, 2-SOCKET, W/ABS, VAI
21	1	30435	AIR SYS ASSY HALDEX ABS A/B PP PSI JAM EYE
22	1	30511G	INSTAL, VALVE PLATE, REAR HOSE MNT, GALV,VAI
23	2	30547	TIRE/WHL 445/50R22.5 GY G394 PPW "CUST. SUPL"
26	1	3529	NUT 5/8-18 X 2-1/8 COUPLER HX PLTD

Major Assembly: 31751

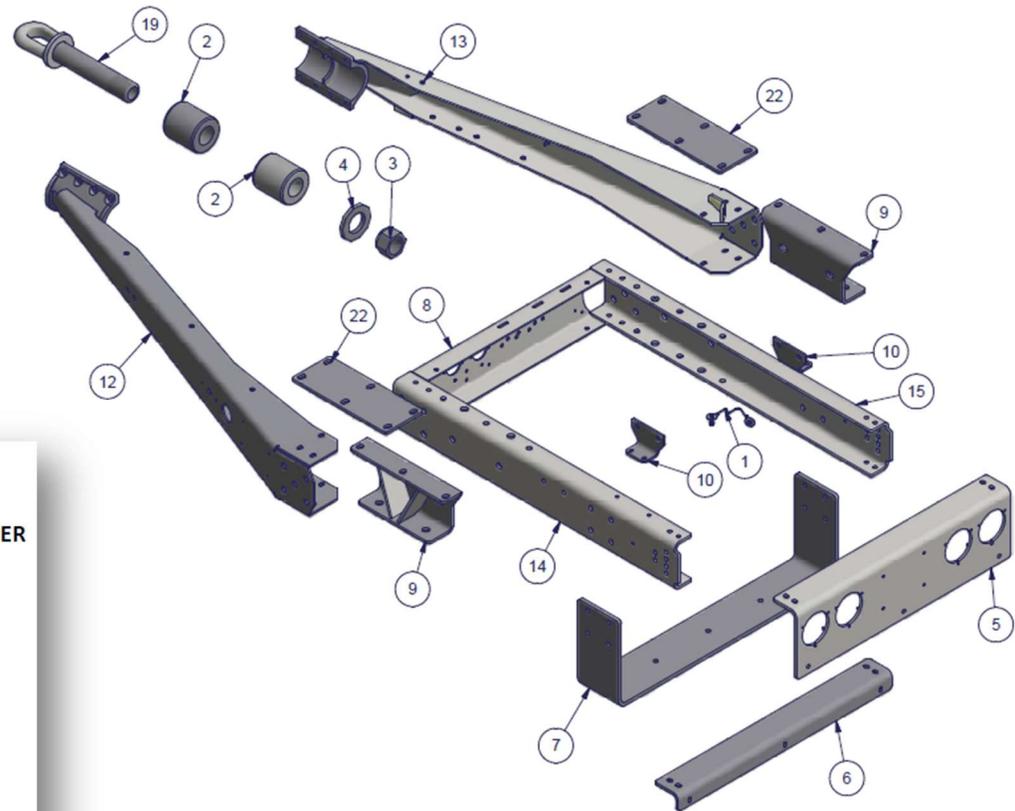




ITEM	QTY	PART	DESCRIPTION
1	1	10970	INSTALLATION, SAFETY WIRE ASSEMBLY, VA
2	2	1157	BUSHING, SHOCK ABSORBER, EYE & SHANK, RUBBER
3	1	15315	NUT, SHANK, HEX
4	1	15660	WASHER, SHANK, DRAWBAR EYE, 1/2", HEX NUT
5	1	18779G	TAILPLATE WELDMENT, 4-LT, VAI, PUR
6	1	18780G	ADAPTER, TAILPLATE, VAI, GALV
7	1	18781G	HANGER, BALLAST, 61#, UNDER TANK, VAI, GALV
8	1	18782G	CROSSMEMBER, FRONT, VAI, GALV
9	2	18785G	SIDE SUPPORT WELDMENT, VAI, GALV
10	2	18788G	BRACKET, AIR TANK MOUNT, VAI, GALV
12	1	30440	DWB 1-PC, WLD VAI RS +5.5 W/PZ, PSI, SHORT
13	1	30441	DWB 1-PC, WLD VAI CS +5.5 W/PZ, SHORT
14	1	31752G	SIDE CHANNEL, 72" DL, RS, RES FWD, GALV, VAI
15	1	31753G	SIDE CHANNEL, 72" DL, CS, RES FWD, GALV, VAI
19	1	4529	EYE & SHANK, 3/8", JAM EYE, HRDN
22	2	9439G	SPRING PLATE, SIDE SUPPORT ASSY, VA-DOLLY

Air Assembly: 30435




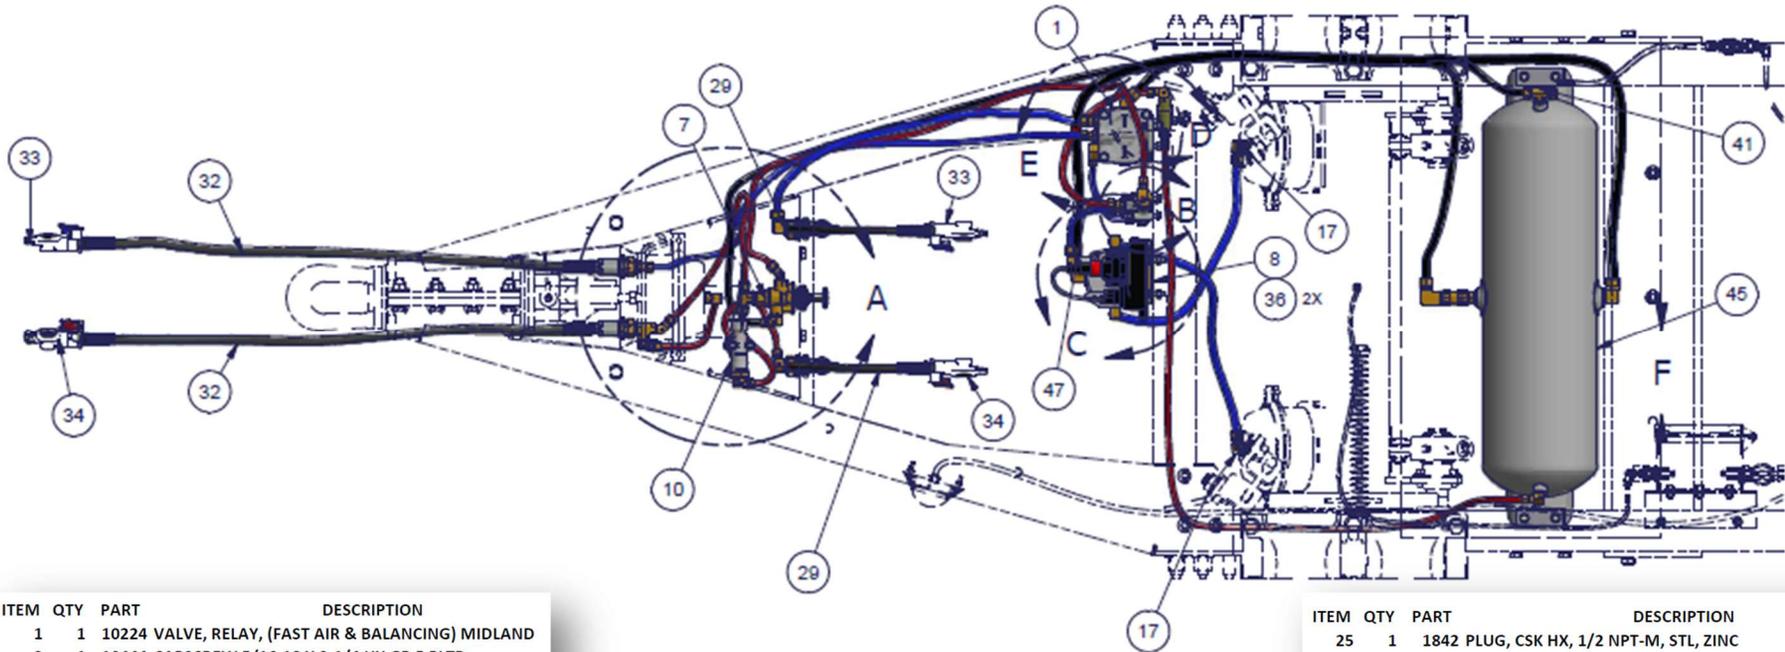


ITEM	QTY	PART	DESCRIPTION
1	1	10224	VALVE, RELAY, (FAST AIR & BALANCING) MIDLAND
2	1	10444	CAPSCREW 5/16-18 X 2-1/4 HX GR 5 PLTD
3	1	10725	TEE, STREET, 3/8 NPT, BRASS
4	4	1181	FITTING, BULKHEAD, 3/8 NPT-F X 1/2 NPT-M, BR
5	1	12582	VALVE, PRESSURE PROTECTION v2 110257, SEALCO
6	22	1454	WASHER 5/16 SAE PLTD
7	1	16199	VALVE, PUSH-PULL, SNGL HOLE, BOOT, SEALCO
8	1	16423	VALVE, ABS ECU, PLC SELECT, HALDEX, SNGL AXLE
9	11	1646	NUT 5/16-18 NYL INS HX PLTD
10	1	16893	VALVE, SEALCO ANTI BACK CHARGE
11	1	1771	VALVE, CABLE DRAIN, W/1/4" NPT-M
12	1	1772	VALVE, CHECK, SC-3, 1/2" NPT, BENDIX
13	100	1785	TUBING, NYLON, AIRBRAKE, 3/8", BLACK
14	123	1786	TUBING, NYLON, AIRBRAKE, 1/2", BLACK
15	1	1804	ELBOW, 90, 3/8T X 1/4 NPT-M, BR
16	10	1805	ELBOW, 90, 3/8T X 3/8 NPT-M, BR
17	5	1806	ELBOW, 90, 1/2T X 3/8 NPT-M, BR
18	2	1807	ELBOW, 90, 1/2T X 1/2 NPT-M, BR
19	1	1809	ELBOW, 45, 3/8T X 1/4 NPT-M, BR
20	1	1812	ELBOW, 45, 1/2T X 1/2 NPT-M, BR
21	5	1817	CONNECTOR, 3/8T X 3/8 NPT-M, BR
22	1	1820	CONNECTOR, 1/2T X 1/2 NPT-M, BR
23	2	1832	COUPLING, 1/2 NPT-F, TAPERED, MI, GALV
24	2	1837	BUSHING, 1/2 NPT-M X 3/8 NPT-F, HX, STL, PLTD



ITEM	QTY	PART	DESCRIPTION
25	1	1842	PLUG, CSK HX, 1/2 NPT-M, STL, ZINC
26	1	1922	OVAL SLEEVE, 1/8, ALUM, FOR 1/8 WIRE ROPE
27	120	2393	TUBING, NYLON, AIRBRAKE, 3/8", RED
28	62	2394	TUBING, NYLON, AIRBRAKE, 1/2", BLUE
29	2	24983	HOSE AIR, 3/8X86, RUBBER, 1/2 X 1/2 CONN
30	2	2652	CAPSCREW 5/16-18 X 1-1/4 HX GR 5 PLTD
31	1	2858	NIPPLE, HX, 1/2 X 1/2 NPT-M, BR
32	2	31685	HOSE AIR, 3/8X36, RUBBER, 3/8 X 1/2 CONN
33	2	31769	GLADHAND, SERV., W/FILTER STD SEAL
34	2	31771	GLADHAND, EMER., W/FILTER STD SEAL
35	60	3276	TUBING, NYLON, AIRBRAKE, 3/8", BLUE
36	2	3509	NUT 3/8-24 METAL LOCK HX GR C PLTD
37	4	3538	CAPSCREW 5/16-18 X 2-1/2 HX GR 5 PLTD
38	2	4495	ELBOW, 90, 1/2 NPT-F, GALV
39	1	4713	ELBOW, 90, 3/8T X 1/2 NPT-M, BR
40	1	5856	TEE, MALE BRANCH, 3/8T X 1/4 NPT-M, BR
41	1	5894	TEE, MALE BRANCH, 3/8T X 3/8 NPT-M, BR
42	4	7419	ISO-PAD, AIR RESERVOIR
43	2	7420	RETAINING PLATE, ISO-PAD, AIR RESERVOIR, GALV
44	4	7901	CAPSCREW 5/16-18 X 1-3/4 HX GR 8 PLTD
45	1	8913	AIR RES, SIDE DRN 1425 CI
46	1	9145	ELBOW, 90, 1/2T X 1/2 NPT-F, BR.
47	1	9858	VALVE, EMERGENCY CONTROL 110376 SEALCO
48	1	1810	ELBOW, 45, 3/8T X 3/8 NPT-M, BR

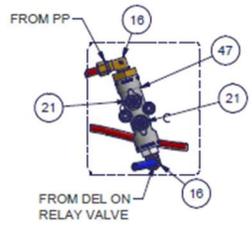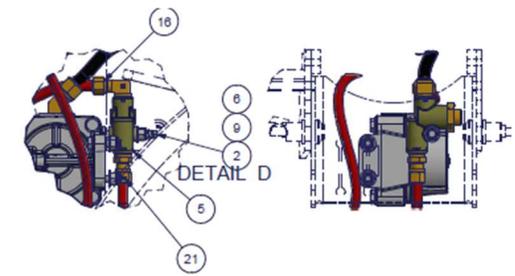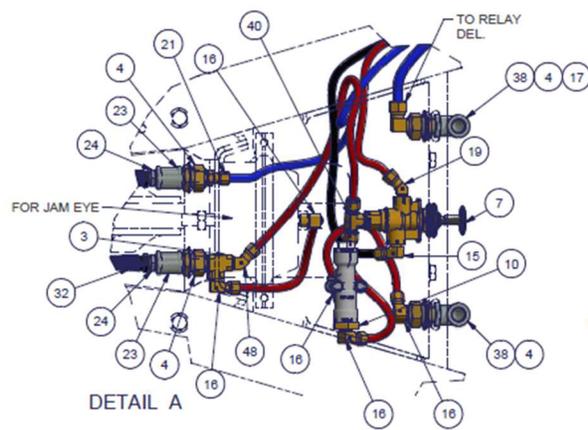


FROM DEL ON
RELAY VALVE

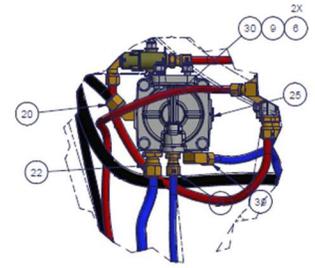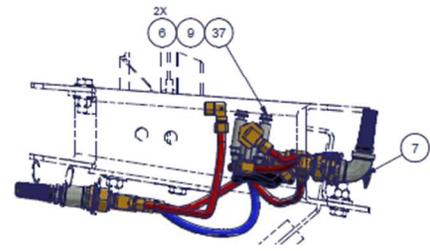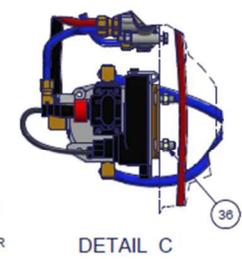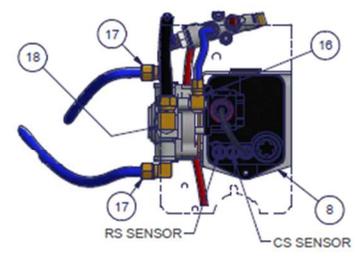


DETAIL E
VIEW ROTATED
-90°

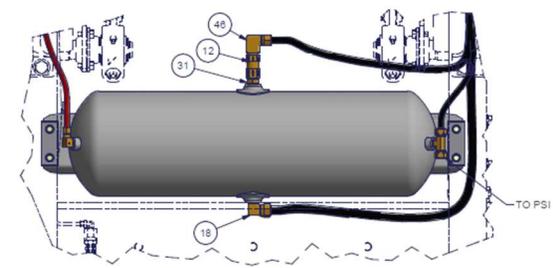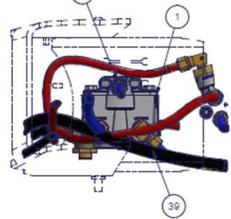

DETAIL F
VIEW ROTATED
90°

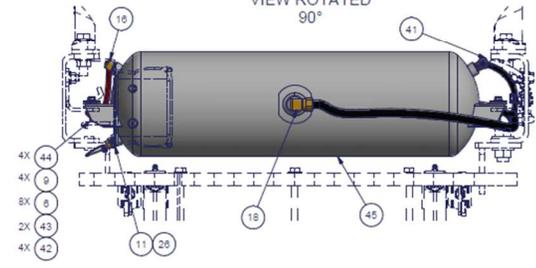

Electrical Assembly: 30152

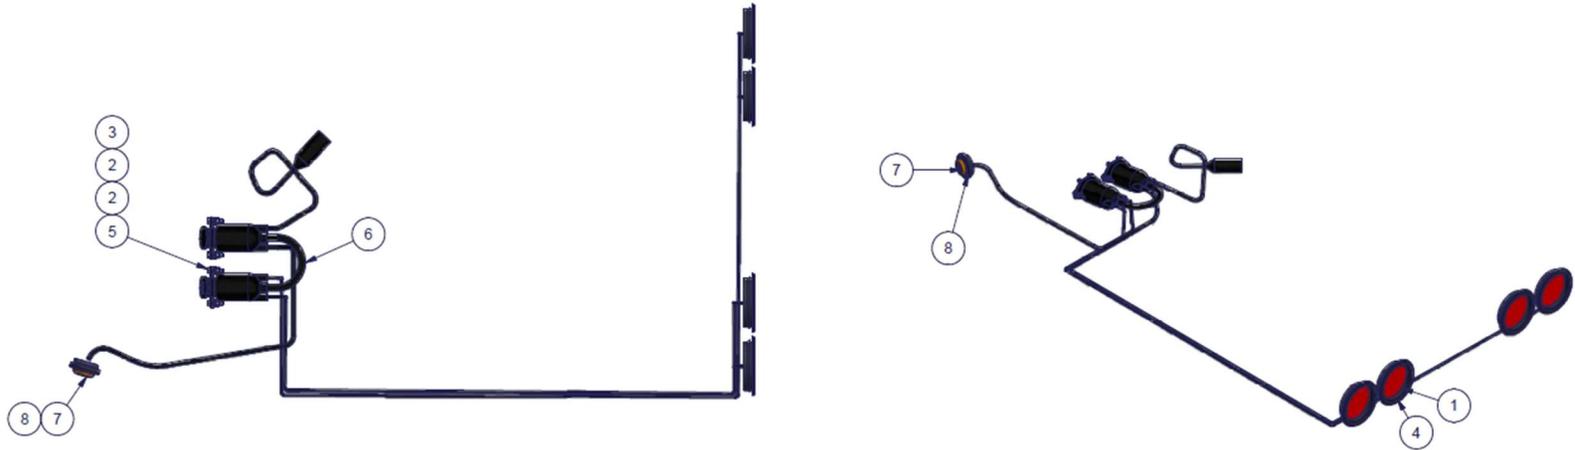

ITEM	QTY	PART	DESCRIPTION
1	4	10831	REFLECTOR 4-1/4" ROUND, RED, FIT 2509 GROMMET
2	8	1454	WASHER 5/16 SAE PLTD
3	4	1646	NUT 5/16-18 NYL INS HX PLTD
4	4	2509	GROMMET, LAMP, GROTE
5	4	2652	CAPSCREW 5/16-18 X 1-1/4 HX GR 5 PLTD
6	1	31690	HARNESS ABS 2-SOCKET NO TAIL LIGHTS
7	1	9562	LENS, AMBER, TRUCKLITE, ABS
8	1	9563	GROMMET, LAMP, TRUCKLITE, MODEL 30

